

HY-WSDCE

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	

5. HY-WSDCE Wind Speed Direction Display & Controller

HY-WSDCE wind alarm is used for the continuous monitoring of wind speed in construction, mining, agriculture, renewable energy, aviation and marine industries. It alerts workers to wind conditions that can cause safety concerns for people and equipment. For example, a wind speed alarm is an important safety tool for crane operators. When wind velocity reaches an unsafe speed according to the crane manufacturer's recommendations and applicable safety regulations, crane operation must be stopped and the equipment should be secured. Continuous monitoring of wind speed using a wind speed alarm can prevent costly damages to machinery and protect workers from injury. Wind speed monitoring also can aid in optimizing everything from wind turbine placement to agricultural pesticide application.

It's mounted on the crane or nearby structure. Wind speed is detected by the latest technology ultrasonic sensor HY-WDS2E. The sensor provides an output current proportional to the wind speed to a cab mounted alarm console. It can simultaneously display real-time wind speed and wind direction. A built-in time delay, variable from 000-999 seconds can be set to prevent very short duration gusts from causing false alarms. Only when wind speed reach preset value limit and last time exceed time delay, will the corresponding relay be triggered. If additional connections are made, the alarm can cause a remote warning light to flash, sound a remote horn or siren, and automatically actuate the crane brakes to prevent the crane from rolling.

Features

- Low Limit Warning Light
- Middle Limit Warning Light
- High Limit Warning Light
- 2 ways 4-20mA current loop output(B for wind direction, A for wind speed)
- RS485 or RS232 output(MODBUS-RTU prototol)

Technical parameters

Display	4 digit 7 Seg LED
Communication interface	RS485
Power supply	AC220V
Analog output	2 ways 4-20mA output
Digital output	MODBUS-RTU via RS485
Relay output	3 ways relay outputs Capacity:125 V AC; max. 60 VA; 150 V DC; max 30 VA
Dimension/Weight	60mm*154mm*110mm (H*L*W) About 540g
Operating Environment	-30— 65 °C 0—95%RH



По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	